


60W PIR
BULKHEAD LIGHT
SLB88 - Black / SLW89 - White



**INSTALLATION & OPERATING
INSTRUCTIONS**

SLB88

PIR BULKHEAD LIGHT - BLACK

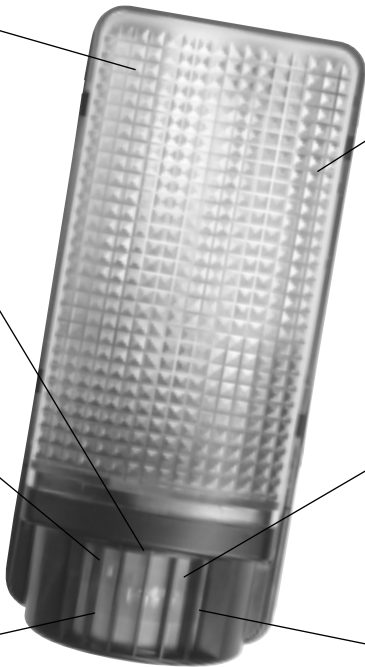


**3 YEAR
GUARANTEE**

In the unlikely event of this product becoming faulty due to defective material or manufacture, within 3 years of the date of purchase, please return it to your supplier with proof of purchase and it will be replaced free of charge.

Should you encounter any difficulty please contact our helpline on 020 8450 0515.

SLW89

 PIR BULKHEAD LIGHT - WHITE



**3 YEAR
GUARANTEE**

In the unlikely event of this product becoming faulty due to defective material or manufacture, within 3 years of the date of purchase, please return it to your supplier with proof of purchase and it will be replaced free of charge.

Should you encounter any difficulty please contact our helpline on 020 8450 0515.

SECTION ONE

GENERAL INFORMATION

The unit utilises passive infrared technology to detect heat radiation of moving human bodies.

Upon detection, the lamp will illuminate for a user-determined time period.

An integral daylight sensor ensures night-only operation.

PARTS INCLUDED

- Luminaire c/w PIR Sensor unit.
- Instruction manual. Please keep safe for future reference.
- Accessory Pack.

TOOLS & PARTS NEEDED

- Electric/hand-held drill & bits.
- Terminal or Electricians screwdriver
- Large slotted/philips screwdriver
- Wire cutters

Unit is for outdoor use only. Unit must be mounted on a non-flammable surface as a fixed luminaire, and is not suitable for portable use.

The unit can get very hot during use. Ensure the unit has cooled before handling.

Ensure adequate ventilation space is allowed between the unit and any object above, in front or to either side of the unit. Suggested space is 0.5m above, 0.3m to either side & 1.0m in front.

If in any doubt, consult a qualified tradesperson or electrician.

DO NOT USE THIS PRODUCT WITH COMPACT FLUORESCENT ENERGY SAVING LAMPS.

SECTION TWO

SELECTING THE LOCATION

The motion detector has a number of detection zones, at various vertical and horizontal angles as shown (see diagram A).

A moving human body needs to cross/enter one of these zones to activate the sensor. The best

all-round coverage is achieved with the unit mounted at the optimum height of 1.8m.

Careful positioning of the sensor will be required to ensure optimum performance. See diagram A detailing detection range and direction.

The sensor is more sensitive to movement ACROSS its field of vision than to movement directly TOWARDS (see diagram B). Therefore position the unit so that the sensor looks ACROSS the likely approach path.

Avoid positioning the sensor where there are any sources of heat in the detection area (extractor fans, tumble dryer exhausts etc.).

Reflective surfaces (ie pools of water or white-painted walls) and overhanging branches may cause false activation under extreme conditions.

During extreme weather conditions the motion sensor may exhibit unusual behaviour. This does not indicate a fault with the sensor. Once normal weather conditions return, the sensor will resume normal operation.

SECTION THREE

INSTALLATION

After choosing a suitable location (see previous section) install the unit as follows:

The unit is suitable for connection to a 230 V ac 50Hz electricity supply. It is suggested that 3-core round flexible cable of 1mm² gauge is used. A isolating switch should be installed to switch the power to the unit ON & OFF. This allows the sensor to be easily switched off when not required or for maintenance purposes.

*** IMPORTANT ***

Switch off the electricity at the fuse box by removing the relevant fuse or switching off the circuit breaker before proceeding with the installation.

Remove the diffuser using a terminal screwdriver to release the clips on both sides (diagram E).

Remove the connection cover (diagram F)

Ensure the unit is in an upright position with the sensor module at the bottom.

Mark the position of the fitting holes.

Drill the holes. Insert the rawl plugs into the holes.

PIERCE & PASS THE CABLE THROUGH THE GROMMET BEFORE PROCEEDING.

Attach the mounting plate to the wall using suitable screws. Do not overtighten the mounting screws as this could damage the mounting plate. If using a power screwdriver, use the lowest torque setting.

CONNECTION

Pass the mains supply cable around the back of the lampholder for ease of wiring.

Connect the cable to the terminal block on the unit as follows (see connection diagram):

NEUTRAL (Blue)

EARTH (Green/Yellow)

LIVE (Brown)

N



L


Ensure that the connections are secure.

Re-attach the connection cover.


Install the lightbulb (not supplied).

Fit the diffuser back onto the main body of the unit, ensuring it clicks firmly in place.

CONNECTION DIAGRAM

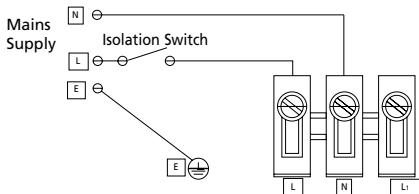

The diagram below also shows the required connections for the addition of slave luminaires. When adding slaves, be sure not to exceed the maximum switchable load (see Technical Specifications).

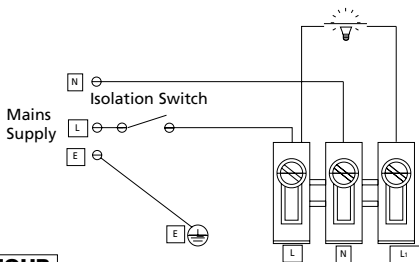

SECTION FOUR

OPERATION AND TESTING

WALK TESTING PROCEDURE

The sensor will rotate from left to right. Adjust the sensor to point in the desired direction. Set the two adjustment controls on the underside of the unit (diagram C) to the following positions:

- TIME - Fully anti-clockwise
- DUSK (LUX) - Fully clockwise

The unit will now operate during daytime as well as at night, illuminating the lamp for approx. 5 seconds each time. This allows testing to be carried out to establish the best position for the sensor.

The lamp will immediately illuminate as the unit goes through its "warm-up" period. After approximately 1 - 2 minutes the lamp will extinguish. Try to remain outside the detection area during the warm-up period.

Walk across the detection area approx 5 metres from the unit. As you cross a detection "zone" the lamp will illuminate. Now stand still until the lamp extinguishes (this should take approx. 5 seconds).

Start moving again. As you cross each "zone" the lamp will illuminate.

Repeat the above, walking at various distances and angles to the unit. This will help you to establish the detection pattern.

SETTING UP FOR AUTOMATIC OPERATION

When walk tests are complete, the unit can be switched to automatic operation :

The TIME setting controls how long the unit remains illuminated following activation & after all motion ceases. The minimum time (fully anti-clockwise) is approx. 5 seconds, whilst the maximum time (fully clockwise) is approx. 5 minutes. Set the control to the desired setting between these limits.

The DUSK control determines the level of darkness required for the unit to start operating. The setting is best achieved by the procedure below:

Set the DUSK control knob fully anti-clockwise. Wait until darkness falls.

When the ambient light level reaches the level of darkness at which you wish the lamp to become operative (ie. At dusk), SLOWLY rotate the control in a clockwise direction until a point is reached where the lamp illuminates. Leave the control set at this point.

At this position, the unit should become operative at approximately the same level of darkness each evening. Observe the operation of the unit. If the unit is starting to operate too early (ie. when it is quite light), adjust the control slightly anti-clockwise. If the unit starts to operate too late (ie. only when it is very dark), adjust the control slightly clockwise. Continue to adjust until the unit operates as desired.

MASKING THE SENSOR LENS

To reduce the sensor coverage, preventing detection in unwanted areas, mask the sensor lens using electricians tape or similar (see diagram D). For your information, the top section of the lens covers long range detection, the bottom covers short range. Similarly, the left and right lens sections cover the left and right detection areas respectively.

SECTION FIVE

TECHNICAL SPECIFICATIONS

Detection Range	Up to 8 metres
Detection Angle	110°
Power Supply	230 V AC ~ 50Hz
Maximum Switchable Load	500W including fitted bulb
Lamp Type	230V 60W (max) GLS ES
Time On Adjustment	5 seconds - 5 minutes
Dusk Level Adjustment	Day & night or night only operation
Environmental Protection	IP44 (suitable for outdoor use)
EC Directives	Conforms to 73/23/EEC, 89/336/EEC

Not suitable for energy saving lamps

**If you experience problems refer to Troubleshooting Guide.
If problems still exist, do not immediately return the unit to store.**

Telephone the Timeguard Customer Helpline

020 8450 0515

Qualified Customer Support Co-ordinators will be on-line to assist in resolving your query.

SECTION SIX

TROUBLESHOOTING GUIDE

PROBLEM

SOLUTION

Lamp stays ON all the time at night.

The unit may be suffering from false activation. Cover the sensor lens completely with a thick cloth. This will prevent the sensor from "seeing" anything. If the unit now switches off after the set time duration and does not re-activate, this indicates that the problem was caused by false activation. The problem may be solved by slightly adjusting the direction/angle of the sensor head (see previous section).

PIR keeps activating for no reason / at random.

You may not be allowing the unit time to complete its warm-up period. Stand well out of the detection range and wait (the warm-up period should never exceed 5 minutes). Occasionally, winds may activate the sensor. Sometimes passages between buildings etc. can cause a "wind tunnel" effect. Ensure the unit is not positioned so as to allow detection of cars/people using public thoroughfares adjacent to your property.

PIR sensor will not operate at all.

Check that the power is switched ON at the circuit breaker/internal wall switch.

Turn OFF the power to the unit and check the wiring connections as per the diagram (see previous section 3). Ensure no connections are loose.

Check the lamp. If the lamp has failed, replace. Ensure that the lamp is seated correctly in the lampholder.

The PIR sensor will not operate at night.

The level of ambient light in the area may be too bright to allow operation at the current DUSK setting. During the hours of darkness, adjust the DUSK control slowly clockwise until the lamp illuminates. Refer to previous section for more details.

Unit activates during the daytime

The level of ambient light in the area may be too dark for the current DUSK setting. During daylight, adjust the DUSK control slightly anti-clockwise. When the lamp load extinguishes, enter the detection area. If the PIR still activates, the setting is still too high. Repeat the above procedure until the PIR does not activate when you enter the detection area. Refer to previous section for more details.


PIR coverage is poor/sporadic

Unit may be poorly located. See previous section - 'Selecting The Location' and re-locate the unit.

Detection range varies from day to day

PIR sensors are influenced by climatic conditions. The colder the ambient temperature, the more effective the sensor will be. You may need to make seasonal adjustments to the sensor head position to ensure trouble-free operation all year round.

TOP VIEW

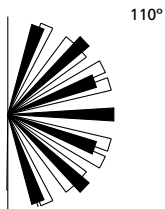

SIDE VIEW


2.5m



8m


A

C

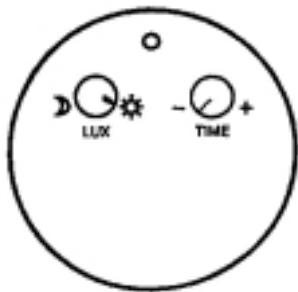


B

 D




Less sensitive

 


More sensitive


Lens Mask

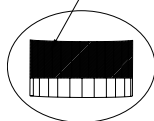


Restrict long detection

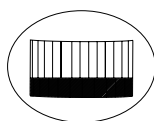



Restrict short detection

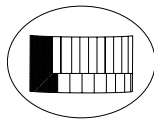


Restrict RHS detection

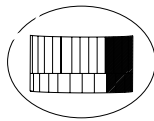

Restrict LHS detection

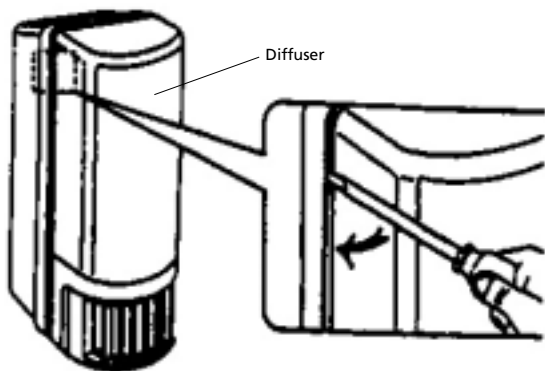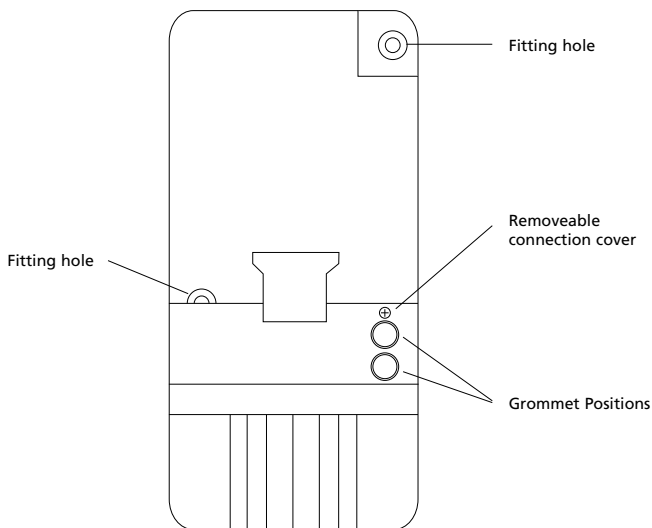E**F**

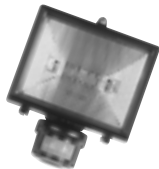CONSUMER**PRODUCT RANGE**

SLB500
500W PIR
Halogen
Floodlight -
Black



SLW2000
2000W PIR
Light
Controller -
White



SLW500
500W PIR
Halogen
Floodlight -
White



SLB88
60W PIR
Bulkhead
Light -
Black



SLB150
150W PIR
Halogen
Floodlight -
Black



SLW89
60W PIR
Bulkhead
Light -
White



SLW150
150W PIR
Halogen
Floodlight -
White



SLB44
60W PIR
Lantern
Light -
Black



SLB2000
2000W PIR
Light
Controller -
Black



SLW45
60W PIR
Lantern
Light -
White

Helpline
020-8450-0515



For a product brochure please contact:

Timeguard Ltd.
Victory Park, 400 Edgware Road,
London NW2 6ND
or email csc@timeguard.com